




## Air Monitoring Results for the Day of March 18, 1999

Time	Mini-Ram 5057 Reading	Mini-Ram 5741 Reading	Comments	Additional Comments
0755	0.00	0.00	Zero instruments	Instruments operating properly
0908	0.00	0.00	Set up instruments	Prepping the Site No Visible Dust
0915			No Excavation	Prepping the Site No Visible Dust
0930	0.00	0.00	No Excavation	Prepping the Site No Visible Dust
1015			No Excavation	Prepping the Site No Visible Dust
1016	0.00	0.00	No Excavation	Prepping the Site No Visible Dust
1036	0.00	0.34	No Excavation Very Windy	Prepping the Site
1040	0.00	0.00	Begin to move soils onsite Very Windy	Prepping the Site No Visible Dust
1100	0.00	0.02	Moving Clean Soil Very Windy	No Visible Dust
1110	0.02	0.00	Begin Excavation Very Windy	No Visible Dust
1130 - 1145	0.00	0.00 - 0.04	Fist Truck in Place No Excavation Very Windy	Preparing to Excavate No Visible Dust
1147	0.00	0.02	Excavation and hand digging Very Windy	No Visible Dust Start to load first Truck
1200	0.00	0.02	Excavating, Hand Digging and Loading Front of Site (E) Very Windy	No Visible Dust
1215	0.00	0.04	Excavating, Hand Digging and Loading Front of Site (E) Very Windy	No Visible Dust
1240	0.00	0.04	Chain Sawing Oak Tree Very Windy	Start to load second Truck
1255	0.00	0.04	Excavating, Hand Digging and Loading Front of Site (E) Very Windy	
1305	0.00	0.04	Excavating, Hand Digging and Loading Front of Site (E) Very Windy	

1330		0.02	Excavating, Hand Digging and Loading Front of Site (E) Very Windy	
1338	0.00	0.17	Excavating stopped	Second Truck Completed
1435		0.02	No Site Activity	
1455		0.01	Moving Soils onsite	
1520		0.01	No Soil Moving Activity	

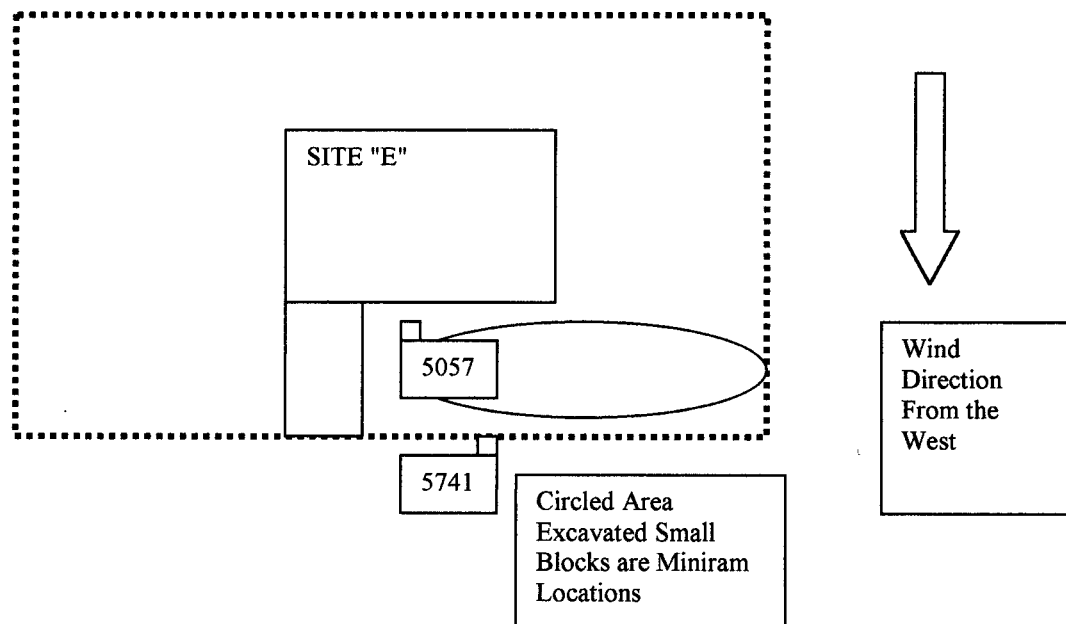

NAME: \_\_\_\_\_ NAME: \_\_\_\_\_

NAME: \_\_\_\_\_ NAME: \_\_\_\_\_

NAME: \_\_\_\_\_ NAME: \_\_\_\_\_


NAME: \_\_\_\_\_ NAME: \_\_\_\_\_

NAME: \_\_\_\_\_ NAME: \_\_\_\_\_

## Air Monitoring Results for the Day of March 19, 1999

Time	Mini-Ram 5057 Reading	Mini-Ram 5741 Reading	Comments	Additional Comments
0745	0.00	0.00	Zero instruments	Instruments operating properly
0800	0.03	0.00	Moving Clean Sand	Prepping the Site No Visible Dust
0830	0.01	0.00	Moving Clean Sand	Prepping the Site No Visible Dust
0850	0.01	0.00	Begin to move soils onsite	Prepping the Site No Visible Dust
0915			No Excavation	No Visible Dust
0930	0.03	0.19	No Excavation	No Site Activity Very Windy
0932			Begin to excavate Very Windy	No Visible Dust
0940	0.01	0.00	Hand digging, Moving Clean Soil Very Windy	Excavating the Site No Visible Dust
0955			First Truck Arrives Very Windy	No Visible Dust
1015	0.05	0.00	Very Windy	Start to Load 1 <sup>st</sup> Truck No Visible Dust
1050	0.00	0.00	Loading 1 <sup>st</sup> Truck Excavating & Hand Digging	No Visible Dust
1100			1 <sup>st</sup> Truck Loaded Start to Load 2 <sup>nd</sup> Truck	No Visible Dust
1120	0.01	0.00	Excavating, Hand Digging and Loading Front of Site (E) Very Windy	No Visible Dust
1133	0.00	0.00	2 <sup>nd</sup> Truck Filled Very Windy	No Visible Dust
1245			Hand Digging Front and Back of Site E Very Windy	
1300	0.00	0.00	Excavating, Front of Site (E) Very Windy	
1320	0.00	0.00	Moving Clean Soils only Very Windy	
1400	0.17 - 0.22	0.01	Excavating, Hand Digging and Loading Front of Site (E) Very Windy	

1430	0.00	0.00	Excavating stopped	
1540	TWA - 0.01	TWA - 0.01	No Site Activity	Depart Site

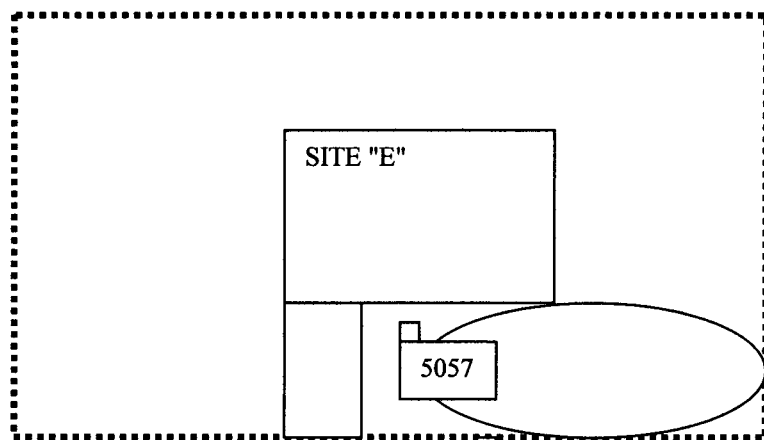

Wind  
Direction  
From the  
West

Circled Area  
Excavated Small  
Blocks are Miniram  
Locations

NAME: \_\_\_\_\_ NAME: \_\_\_\_\_

NAME: \_\_\_\_\_ NAME: \_\_\_\_\_


NAME: \_\_\_\_\_ NAME: \_\_\_\_\_

NAME: \_\_\_\_\_ NAME: \_\_\_\_\_

NAME: \_\_\_\_\_ NAME: \_\_\_\_\_

## Air Monitoring Results for the Day of March 22, 1999

Time	Mini-Ram 5057 Reading	Mini-Ram 5741 Reading	Comments	Additional Comments
0730	Due to Weather (Rain & Snow)	Minirams were not	used	Work on excavator bucket
0800			1 <sup>st</sup> Truck arrives	No Visible Dust
0815			2 <sup>nd</sup> Truck arrives	No Visible Dust
0825			Prepping the Site	No Visible Dust
0920			No Excavation	No Visible Dust
0925		Light Rain	Begin to excavate	Soil Damp Very Windy
1005			First Truck Filled Very Windy	No Visible Dust
1010		Light Rain	Excavating Soil From Front of House Very Windy	Loading 2 <sup>nd</sup> Truck No Visible Dust
1047		Threat of Snow	2 <sup>nd</sup> Truck Filled Very Windy	No Visible Dust
1100			No Site Activity	No Visible Dust
1230			Hand Digging Front of Building	No Visible Dust
1300		Snowing	Hand Digging Front of Building staging soils	No Visible Dust
1308			Deconing Bucket	No Visible Dust
1320		Light snow	Moving clean soils onsite Very Windy	No Visible Dust
1325			3 <sup>rd</sup> Truck arrives	
1330			Moving Clean Soil	No Visible Dust
1340			Start to load 3 <sup>rd</sup> truck from soil from side of house	No Visible Dust
1405			Start to load 3 <sup>rd</sup> truck from soil from side of house	No Visible Dust
1445			Excavating stopped	
1550			No Site Activity	Depart Site

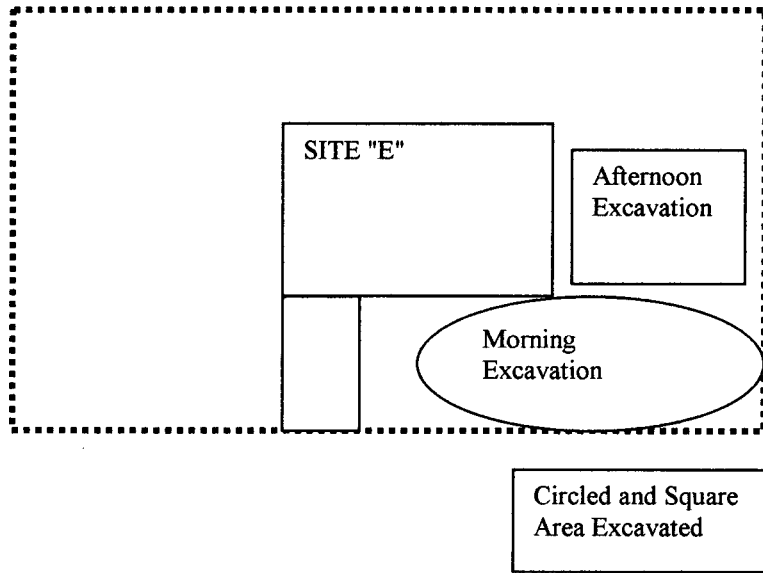

Wind  
Direction  
From the  
West

NAME: \_\_\_\_\_ NAME: \_\_\_\_\_

NAME: \_\_\_\_\_ NAME: \_\_\_\_\_

NAME: \_\_\_\_\_ NAME: \_\_\_\_\_


NAME: \_\_\_\_\_ NAME: \_\_\_\_\_

NAME: \_\_\_\_\_ NAME: \_\_\_\_\_

## Air Monitoring Results for the Day of March 23, 1999

Time	Mini-Ram 5057 Reading	Mini-Ram 5741 Reading	Comments	Additional Comments
0705 - 0710	0.00	0.00	Zero instruments	Instruments operating properly
0712	0.00	0.00	Set up instruments	Prepping the Site No Visible Dust
0715			No Excavation	Prepping the Site No Visible Dust
0740	0.00	0.00	Moving Clean Soil	No Visible Dust
0748	0.00	0.00	Moving Clean Soil	No Visible Dust
0755	0.00	0.00	Moving Clean Soil	No Visible Dust
0810	0.00	0.00 Move Miniram to Rain Gutter on north side of house	Begin to excavate and stockpile soils	Sunny No Visible Dust
0830	0.00	0.00	Hand Digging Excavating and Stockpiling soils	No Visible Dust
0850	0.00	0.00	No Site Activity	No Visible Dust
0923	0.00	0.00	Excavating and Stockpiling soils	No Visible Dust
0939	0.00	0.00	Moving Clean Soil	No Visible Dust
0955	0.00 Move Miniram to Snow Fence along Driveway	0.00 Move Miniram to Rear Deck	Excavation and hand digging	No Visible Dust
1020	0.00	0.00	Hand Digging Rear of Site (E)	No Visible Dust
1045	0.00	0.00	Excavation and hand digging	No Visible Dust
1103	0.00	0.00	Excavation and hand digging	No Visible Dust
1120	0.00	0.00	Excavation and hand digging	No Visible Dust
1155	0.00	0.00	Excavating, and leveling site and smoothing soils	
1250	0.00	0.00	Moving Clean Soils and excavating soils at the rear of the Site	No Visible Dust
1310	0.00	0.00	Spreading Clean Soils rear of property	No Visible Dust
1340	0.00	0.00	Hand Digging	No Visible Dust
1355	0.00	0.00	Excavation and hand digging rear of property	No Visible Dust
1417	0.00	0.00	Excavation and hand digging rear of property	No Visible Dust

1430	0.00	0.00	Excavation and hand digging rear of property	No Visible Dust
1450	0.00	0.00	Excavation rear of property	No Visible Dust
1510	0.00	0.01	Excavation rear of property	No Visible Dust
1515	0.00	0.00	Excavation rear of property	No Visible Dust
1550	TWA - 0.00	TWA - 0.00		Depart Site

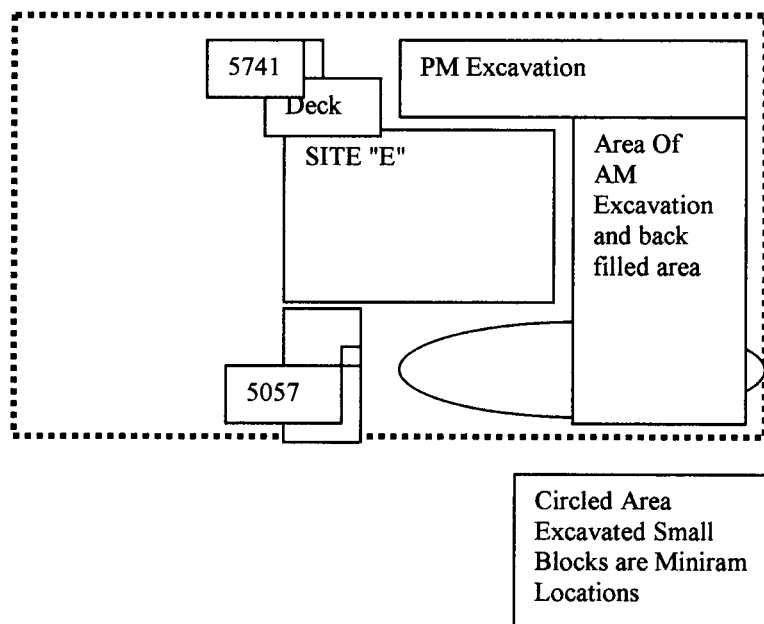

Wind  
Direction  
From the  
West

NAME: \_\_\_\_\_ NAME: \_\_\_\_\_  
NAME: \_\_\_\_\_ NAME: \_\_\_\_\_  
NAME: \_\_\_\_\_ NAME: \_\_\_\_\_  
NAME: \_\_\_\_\_ NAME: \_\_\_\_\_




NAME: \_\_\_\_\_ NAME: \_\_\_\_\_

## Air Monitoring Results for the Day of March 24, 1999

Time	Mini-Ram 5057 Reading	Mini-Ram 5741 Reading	Comments	Additional Comments
0728	Due to Weather (Light Rain)	Minirams can not be used	Start Preparing Site	No Visible Dust
0735 - 0745			Site Safety Meeting	Hand Tools
0745 - 0800			Inspect First aid kit, Fire Extinguisher and eyewash	Preparing Site
0800 - 0825	0.00	0.00	Bringing in Clean Soil	No Visible Dust
0900			Zero instruments	Instruments operating properly
0908	0.00 on rear fence	0.00 on back Patio	Set up instruments	Prepping the Site No Visible Dust
0911	0.00	0.01	Begin to excavate and stockpile soils	No Visible Dust
0928	0.00	0.03	Excavating, hand digging, and stockpiling soils	No Visible Dust
0929	0.00	0.00	Excavator Fan Belt Broken, No Excavation Activities	No Visible Dust
1025	0.00	0.00	Moving Clean Soil and hand digging along house	No Visible Dust
1050	0.00	0.00	Moving tree Debris from property	Partly Sunny No Visible Dust
1120	0.00	0.02	Moving tree Debris from property	No Visible Dust
1320	0.00	0.00	Hand digging only	No Visible Dust
1323	0.00	0.00	Excavating and Stockpiling soils	No Visible Dust
1340	0.00	0.04	Excavating rear yard	No Visible Dust
1355	Starts to Rain	Starts to Rain	Excavating rear yard	No Visible Dust
1410	0.00	0.00	Excavating rear yard	No Visible Dust
1430	0.00	0.00	Moving Clean Soils	No Visible Dust
1435	0.00	0.00	Excavator overheating stop work	No Visible Dust
1515	0.00	0.00	Excavation and hand digging	No Visible Dust

1530	0.00	0.00	Excavation rear of property done for today	No Visible Dust
1610	TWA - 0.00	TWA - 0.00		Depart Site

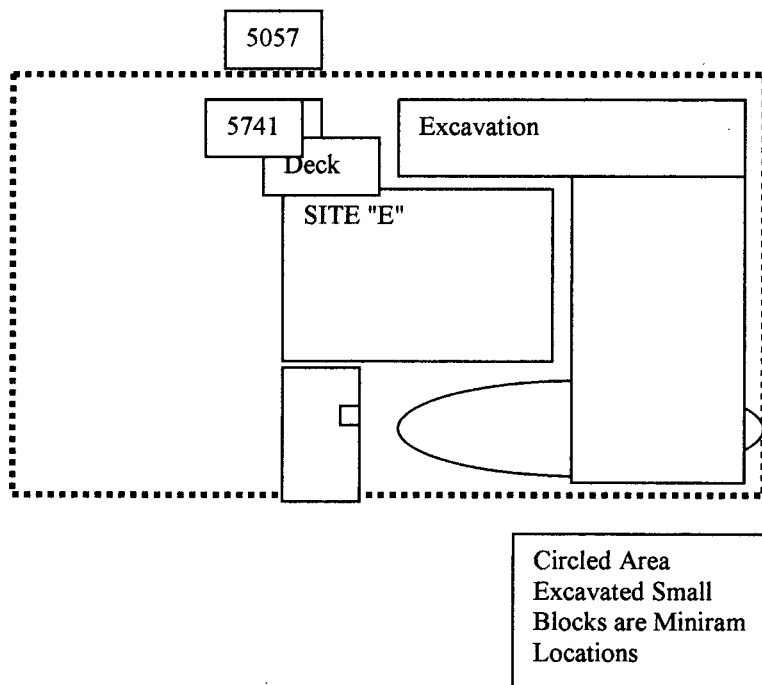

NAME: \_\_\_\_\_ NAME: \_\_\_\_\_

NAME: \_\_\_\_\_ NAME: \_\_\_\_\_

NAME: \_\_\_\_\_ NAME: \_\_\_\_\_

NAME: \_\_\_\_\_ NAME: \_\_\_\_\_

NAME: \_\_\_\_\_ NAME: \_\_\_\_\_